



Plate deep
Teller tief
Talerz głęboki
Ø 210 mm (nr 119)



Plate deep
Teller tief
Talerz głęboki
Ø 305 mm (nr 125)



Plate flat
Teller flach
Talerz plytki
Ø 140 mm (nr 126)
Ø 165 mm (nr 128)
Ø 185 mm (nr 130)
Ø 210 mm (nr 131)
Ø 225 mm (nr 132)
Ø 230 mm (nr 133)
Ø 240 mm (nr 134)
Ø 250 mm (nr 136)
Ø 265 mm (nr 138)



Oval dish
Platte oval
Półmis owalny
Ø 250 mm (nr 156)
Ø 290 mm (nr 158)
Ø 330 mm (nr 160)



Round pickle dish
Beilageplatte rund
Rawier okrągły
Ø 160 mm (nr 1301)



Pickle dish
Beilageplatte
Rawier
Ø 230 mm (nr 1108)



Pickle dish
Beilageplatte
Rawier
Ø 250 mm (nr 1112)
Ø 270 mm (nr 1115)



Pickle dish
Beilageplatte
Rawier
Ø 220 mm (nr 1308)
Ø 255 mm (nr 1312)



Round pickle dish
Beilageplatte rund
Rawier okrągły
Ø 190 mm (nr 1302)
Ø 215 mm (nr 1304)



Round pickle dish
Beilageplatte rund
Rawier okrągły
Ø 235 mm (nr 1303)



Salad bowl
Salatschüssel
Salaterka
Ø 160 mm (nr 118)



Fruit bowl
Kompottschälchen
Kompotierka
Ø 120 mm (nr 114)



Bowl
Schüssel
Miska
Ø 130 mm (nr 123)
Ø 140 mm (nr 124)



Bowl
Schüssel
Czarka
0,10 l (nr 1070)



Bowl
Schüssel
Czarka
0,05 l (nr 1370)



Salad bowl (relief)
Schüsselchen mit Relief
Salaterka z reliefem
Ø 90 mm (nr 1317)
Ø 115 mm (nr 1319)



Tea pot
Teekanne
Czajnik
0,40 l (nr 1020)



Cup and saucer
Tasse mit Untertasse
Filiżanka ze spodkiem
0,35 l / Ø 185 mm (nr 107, 116)
0,35 l / Ø 165 mm (nr 107, 113)



Cup and saucer
Tasse mit Untertasse
Filiżanka ze spodkiem
0,20 l / Ø 145 mm (nr 101, 112)
0,25 l / Ø 145 mm (nr 104, 112)



Cup and saucer
Tasse mit Untertasse
Filiżanka ze spodkiem
0,19 l / Ø 150 mm (nr 106, 115)
0,23 l / Ø 150 mm (nr 105, 115)



Cup and saucer
Tasse mit Untertasse
Filiżanka ze spodkiem
0,10 l / Ø 110 mm (nr 170, 171)



Milk jug
Gießer
Dzbanek do mleka
0,11 l (nr 1003)
0,13 l (nr 1005)



Mug
Kaffebecher
Kubek
0,24 l (nr 111)



Ashtray
Aschenbecher
Popielnica
Ø 90 mm (nr 1322)
Ø 115 mm (nr 1324)